

# PANIC ALARM

Wall Mountable Alarm

Product Code: EL00017

## Introduction

The Panic Alarm is easily fixed to the wall to provide a means to alert of a threat. The alarm has a bright red colour to ensure it is highly visible to the user. When the ripcord is pulled a powerful 120dBs siren and flashing red LED light are activated.

## Mounting the Panic Alarm

1. Use the panic alarm holder to mark 3 points on the wall where you want the unit to be fixed.
2. Drill 3 holes approximately 2.6mm deep and place screw jackets into the holes.
3. Place the holder on the wall and screw the screws provided into the jackets in the wall.
4. Place alarm in the holder ensuring the ripcord is pulled through the hole at the bottom of the holder.

## Operation of the alarm


On first use, remove the tab from the battery compartment on the back of the unit.

1. Push toggle switch up to the 'On' position to arm the alarm. The red LED will flash every 30 seconds when the alarm is armed.
2. To activate the alarm siren pull downwards on the ripcord, the powerful 120dBs siren will sound and the red LED will flash continuously.
3. To stop the alarm, replace the pin into the alarm or switch the toggle switch to the 'Off' position.
4. To deactivate the alarm ensure the pin is replaced into the unit and push the toggle switch down to the 'Off' position.



## Battery replacement

It is recommended that the alarm is tested regularly. If the alarm sounds weak, the batteries should be replaced. To replace the batteries, unscrew the battery compartment as shown in the diagram below and remove the cover. Remove the old batteries and insert new batteries noting the correct polarity. This unit operates on 2 x AAA batteries.

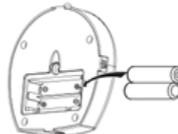

## WARNING

The high output siren fitted to this quality alarm may cause ear damage if used at close range for a prolonged period of time. Keep away from children and pets ears. This product is designed for use as a deterrent; it does not guarantee protection or personal safety.

## CAUTION

- When testing the alarm, make sure you hold it at least at arm's length away from your ear.
- The power source or propellant has a finite / limited life.
- DO NOT MODIFY THE ALARM.
- The alarm should be kept out of reach and audible range of children and pets.

## Note:

Performance may be adversely affected following prolonged exposure to extreme temperatures.

### Solon Security

Unit 40  
Manor Industrial Estate  
Flint, Flintshire  
CH6 5UY

[solonsecurity.co.uk](http://solonsecurity.co.uk)

### Industry Leaders in Quality

