

WIRELESS HOME ALERT KIT

Simple Preset Security System

Product Code:EL00193

Introduction

The Essential Wireless Home Alert Kit is a ready-paired, out of the box security system that can instantly protect multiple zones and entry points around a property. The kit has an overall operating range of 80m and each PIR sensor has a detection distance of 5m.

Contents

1 x Wireless 5 channel receiver	2 x Mounting brackets
3 x Magnetic contacts	3 x Adhesive sets for magnetic contacts
2 x PIR sensors	4 x Fixing screws and wall plugs

Battery Installation

Please Note: Batteries are not included with any units.

Wireless 5 Channel Receiver

Remove the battery cover on the rear of the unit by unclipping it and insert 3 x C batteries, noting the correct polarity. Replace the battery cover. Turn the unit to Low or High for it to be operational, depending on your volume preference.

PIR Sensors

Unscrew the battery cover on the rear of the unit. Insert 3 x AA batteries, noting the correct polarity. Replace and rescrew the battery cover.

Magnetic Contacts

Remove battery cover on the front of the unit by sliding it downwards. Insert 2 x AA batteries, noting the correct polarity. Replace the battery cover and turn the unit On at the side switch for it to be operational.

To replace batteries at any point, simply follow the steps above.

Operation

Please Note: All units are ready paired out of the box in the following sequence and are labelled accordingly.

Receiver Zone 1: Magnetic Contact 1
Receiver Zone 2: Magnetic Contact 2
Receiver Zone 3: Magnetic Contact 3

Receiver Zone 4: PIR Sensor 4
Receiver Zone 5: PIR Sensor 5

As all units are ready paired, all that is required is to install the sensors in your desired locations. When triggered, the relevant sensor will send a signal to the wireless receiver. Each sensor has its own audio alert and the relevant section's LED will illuminate on the receiver, so you know which zone the alert is coming from.

When a sensor is triggered, the alert will sound on the receiver continuously for 30 seconds, or until the switch on the receiver is slid to Off, clearing the alert. The relevant section's light will remain illuminated until the alert has been cleared. This informs the user a detection has occurred, even if they missed the audio alert.

If more than one sensor is activated, the first-activated alert will sound on the receiver then, after a 10 second delay, the second-activated alert will sound and so on.

Note: A single sensor cannot send multiple alerts; each alert must be cleared on the receiver before a new alert can transmit. This ensures no alerts are missed.

To reset the entire kit, simply switch the receiver Off and then back on to High or Low.

Installation

The wireless receiver is for **indoor use only**. Due to its portable nature, it can be moved around and located as required. As long as the receiver is within 80m of all sensors, the kit will function as intended.

The PIR sensors are suitable for **outdoor use** and are fully weatherproof. Use the mounting brackets and fixing screws to install the sensors as required. Always ensure you install the sensors at least 3 feet off the ground to guarantee detection. It is also recommended to install the sensors out of arms reach to prevent tampering. Each sensor has a 5m range and 120° detection angle.

The Magnetic Contacts are for **indoor use only** and can be installed on both windows and doors. When the door/window is open and the contact is broken, the sensor will trigger. Use the adhesive fixings to install both parts of the sensor on your desired entry point, making sure one part is on the door/window and the other on the frame. Ensure the contact strip is no more than 10mm from the main unit.

Solon Security

Unit 40
Manor Industrial Estate
Flint, Flintshire
CH6 5UY
solonsecurity.co.uk

