

DRIVEWAY ALARM

Motion activated early warning system

Product Code:EL00192

Introduction

The Driveway Alarm is an easy setup kit designed to provide an early warning for intruders or visitors to a property. The weatherproof PIR sensor detects movement and sends a signal to the wireless indoor receiver, which issues a chime alert.

Contents

1 x Wireless receiver
1 x Outdoor PIR sensor
1 x Mounting bracket
2 x Fixing screws and wall plugs

Battery Installation

Please Note: batteries are not included with this kit.

Wireless Receiver

Slide off the battery cover on the rear of the unit in the direction shown by the printed arrow. Insert 3 x C batteries, noting the correct polarity. Replace the battery cover.

Outdoor PIR Sensor

Unscrew the battery cover on the rear of the unit. Insert 3 x AA batteries, noting the correct polarity. Replace the battery cover.

To replace batteries at any point, simply follow the steps above.

Operation

Please Note: both units are ready paired out of the box.

The receiver comes with three setting options: Hi, Lo and Off. To switch the unit on, select either Hi or Lo.

The Hi or Lo settings dictate the volume of the chime when activated. You can adjust to suit your needs.

Once batteries are installed, the PIR sensor will begin detecting movement instantly. The PIR sensor has a 5-7m range.

Installation

The receiver is for indoor use only. Due to its portable nature, it can be moved around and located as required. As long as the receiver is within 120m of the sensor, the kit will function as intended.

The sensor is suitable for outdoor use and is fully weatherproof. Use the fixing screws to install the mounting bracket and fix the sensor as required. Always ensure you install the sensor at least 3 feet off the ground to guarantee detection. It is also recommended to install the sensor out of arms reach to prevent tampering.