

PANDA PERSONAL SAFETY ALARM

Personal Alarm with Torch

Product Code: AL00030

Introduction

The Panda Alarm is designed to help increase personal safety. The alarm comes with a handy torch option, when you press the paw the Panda's eyes light up. When the alarm is activated the eyes will flash. The alarm is intended to shock an attacker giving the victim an opportunity to escape from the scene. The alarm should not be relied on to attract help, but to distract the attacker.

Note:

The Panda Alarm is designed to detach itself from the key ring attachment once activated to ensure the user does not need to leave their keys at the scene if used for this function.

Operation of the alarm / torch


Before using the Panda Alarm for the first time please remove the plastic tab covering the batteries.

1. To activate, simply pull the key ring attachment out of the alarm. To de-activate replace the pin into the alarm.
2. To use the torch, press the button on the panda's left paw. If you release the button, the torch will turn off.

Battery replacement

It is recommended that the alarm is tested regularly. If the alarm sounds weak the batteries should be replaced. To replace the batteries remove screws from back cover and replace the batteries with correct polarity.

The unit operates by 3 x LR44 (or equivalent) button batteries.

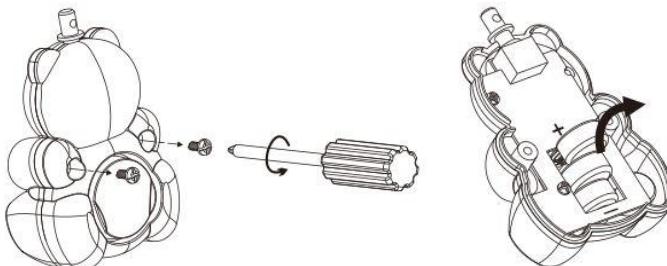

WARNING

The high output siren fitted to this quality personal alarm may cause ear damage if used at close range for a prolonged period of time. Keep away from children and pets ears. This product is designed for use as a deterrent; it does not guarantee protection or personal safety.

CAUTION

- When testing the alarm, make sure you hold it at least at arm's length away from your ear.
- The power source or propellant has a finite / limited life.
- **DO NOT MODIFY THE ALARM.**
- The alarm should be kept out of reach and audible range of children and pets.

Note:

Performance may be adversely affected following prolonged exposure to extreme temperatures.

Personal Safety Alarm Guidance

It is advised that use of an audible personal alarm should not be relied on as the sole means of preventing an attack and should be used in conjunction with other precautionary measures.

Please note the following advice:

General use

- Always have the alarm close to hand and ready for use.
- Plan your route / journey in advance.
- Tell someone where you are going and what time you will be back.
- Walk with confidence.
- Be alert.

When in your car

- Always have the alarm close to hand and ready for use.
- Always park in well lit areas.
- Have the keys ready as you approach your car.
- If another vehicle (including the police) is signalling you to stop, do not pull over in an isolated spot, wait until you reach a safe area.
- Be alert at all times.

Before you use your alarm

- Be sure you know how to activate and de-activate the alarm.
- Make regular checks on power and at the first indication of a weak sound, replace the battery.
- Practice appropriate means of carrying the alarm ready for use.
- **DO NOT SHINE TORCH DIRECTLY INTO EYES.**

Remember

Personal safety alarms are designed for use by individuals who are under threat from attack and should be used with care and responsibility. It is intended to shock and disorientate an attacker to provide a distraction so that the user can make an escape.

It is not intended to be used as a distress signal for attracting help and attention. However the noise may induce fear of intervention and detection of others so this is an opportune secondary function.

DON'T FORGET AN AUDIBLE PERSONAL ALARM SHOULD NOT BE EXPECTED TO PROVIDE A COMPLETE SAFEGUARD AGAINST ASSAULT AND USERS SHOULD ALWAYS TAKE SUITABLE PRECAUTIONS TO REDUCE THE RISK OF ATTACK.

Solon Security

Unit 40

Manor Industrial Estate

Flint, Flintshire

CH6 5UY

solonsecurity.co.uk

