

Fitting Instructions

Door Frame – Fitting the security staple & chain



1. Position the security staple on the door frame in a convenient position adjacent to the door handle.
2. Mark the position of the 4 screw holes using a pencil.
3. Locate the pencil marks and drill 4 pilot holes with a 3mm diameter drill bit to a depth of 30mm.



installer tip – measure then mark the depth on the drill bit using a small piece of masking tape.

If you encounter reinforcement within the door frame stop drilling.



4. Attach the chain to the security staple using the triangle shaped link.
5. Reposition the security staple and use the self tapping screws to obtain a solid fix to the frame.

If there is no reinforcement within the door frame increase the hole sizes to 9mm using the 9mm drill.

OR



6. Insert the Jack Nuts within the 9mm holes, tap with a hammer if tight or slightly increase the hole size. The Jack Nuts should be a relatively tight fit.
7. Attach the chain to the security staple using the triangle shaped link.
8. Use the 4 machine screws, of equal length, to obtain a solid fix to the frame.

IMPORTANT: Please ensure you use the correct screw driver. The screw heads will strip otherwise. If this does happen take out the existing screw and use a new one.

Fitting Instructions

Door Frame – Fitting the chain hanger

When not in use the chain can either be left to hang or a security peg can be fixed to the door frame to act as a chain hanger.



9. Position the security peg so when the chain is attached it hangs in a tidy fashion. Allow suitable slack to be able to remove the egg shaped latch.
10. Mark the position of the hole with a pencil
11. Locate the pencil marks and drill a pilot hole with a 3mm diameter drill bit to a depth of 30mm.



installer tip – measure then mark the depth on the drill bit using a small piece of masking tape.

If you encounter reinforcement within the door frame stop drilling.



12. Reposition the security peg and use a self tapping screw to obtain a solid fix to the frame.
If there is no reinforcement within the door frame increase the hole sizes to 9mm using the 9mm drill.
13. Insert the Jack Nut within the 9mm hole, tap with a hammer if tight or slightly increase the hole size. The Jack Nut should be a relatively tight fit.
14. Reposition the security peg and use the longer length machine screw to obtain a solid fix to the frame.

Fitting Instructions

Door Handle – Fitting the security peg to the door handle

The security peg fits underneath the door handle using the existing door handle fixing screw.



15. Using a suitable screwdriver unscrew and remove the bottom fixing screw from the door handle.
16. Thread the screw through the security peg. The side with the rounded edge should face away from the door handle surface.
17. Insert the screw back into the bottom fixing hole of the door handle.



Using a suitable screwdriver retighten the screw*

** In some circumstances the existing screw may not be long enough to fix the security peg to the bottom of the door handle.

WARNING


If the existing screw is too short it may compromise the security of the door chain. In these instances you should use one of the long machine screws supplied with your PVCu door chain.

It is likely that you will need to cut the screw to the desired length depending on the thickness of the door. Always use a suitable cutting device such as a hacksaw.

To determine the length you need to cut the new screw. You will need to measure the existing screw and add 13mm (to allow for the depth of the security peg.) Mark the screw using a small piece of masking tape and cut to this length.

DO NOT use either of the supplied screws without checking that it is the correct length. If the screw is too long it will not tighten / lock down on the security peg. This will compromise the security of the door chain and may result in your door handle becoming loose.

This pack contains all the fittings and fixtures that are required to fit this door chain to most PVCu doors.

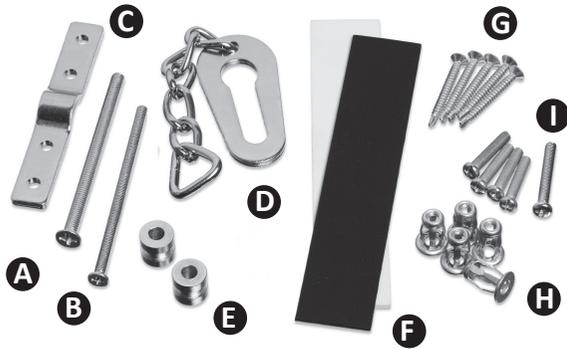

Contents of the set

- A 1 x M6 Door handle fixing screw 100mm long
- B 1 x M5 Door handle fixing screw 100mm long
- C 1 x Security staple with 4 fixing holes
- D 1 x 160mm welded chain with triangle fixing and slotted egg latch attached
- E 2 x Security pegs
- F 2 x Self adhesive door protectors (1 x white and 1 x black)

For door frame profiles **with** internal reinforcement

- G 5 x Self tapping screws

For door frame profiles **without** internal reinforcement

- H 5 x M5 Jack Nut
- I 5 x M5 Machine screws (1 screw longer than the other 4)

Tools required to fit the PVCu Door Chain

- Power drill
- 3mm drill bit & 9mm drill bit
- Phillips head screwdriver
- Pencil
- Masking tape
- Small hammer
- Hacksaw



Components and colours may vary



Step by step installation video



Unit 40, Manor Industrial Estate,
Flint Flintshire, CH6 5UY
sales@solonsecurity.co.uk
solonsecurity.co.uk



HA00434

Door Chain for PVCu Doors



Secured by Design



Police Preferred Specification

Never let strangers into your home unless you are absolutely sure they are who they say they are. Use your door chain when checking their identity.

Introduction

The Door Chain Guard for PVCu Doors is a Patented Design and has undergone full independent testing to the highest standard. Unlike other door chains the fitting of this door chain does not require you to drill holes into your PVCu door. This prevents the risk of damaging your door and avoids an expensive repair bill.

IMPORTANT: Please read these instructions carefully before you attempt to fit this product to your door.

solonsecurity.co.uk